



Gecko-Loc

Basket installation (I)

1




Clean the surface thoroughly.
Rinse the surface & rubber pad.
Dry the surfaces fully.

Read This First :



- Attaches to flat, shiny, glazed, non-porous surfaces.
- Never use on painted or textured surfaces.
- Do not use on porous or uneven surfaces.
- Do not position pad over grout lines.
- Keep these instructions for future reference.

2

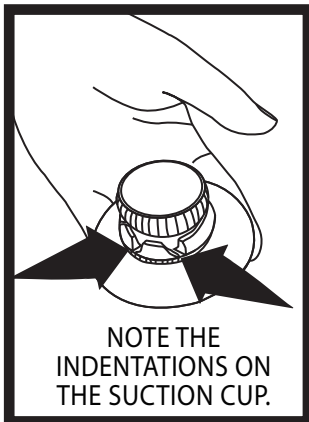

After you've unpacked your Gecko-Loc super suction cups, have a look at the back

THE RUBBER BASE MUST BE FLAT TO INSTALL

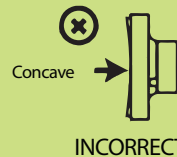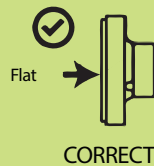




Gecko-Loc


Basket installation (II)

3

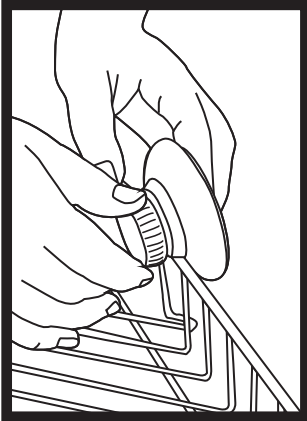


You'll loosen the cup and slide the suction up over the rail of the basket to fit within the indentations. Tighten the cup just enough that it stays in place

4

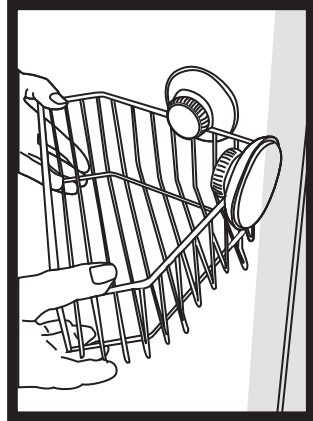

Position the basket where you want it. Ensure the cups are not over any grout lines or rough surfaces. Don't worry if the cup position is not symmetrical, they hold a great deal of weight.

5

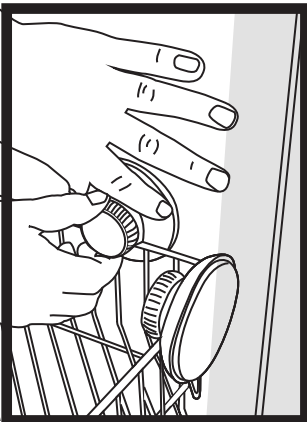

With one hand, press the cup **FIRMLY** to the surface. With the other, tighten the knob. You should feel it getting harder and harder to turn. This indicates a stronger and stronger hold. Screw it until it stops. Repeat with the other suction cup.